



### Important Safety Information

Not for use by children under 10 years.

Not for use on clothing for children under 10 years.

**CHOKING HAZARD:** Small parts. Keep away from reach of children under 3 years.

The button post has a sharp tip that may puncture the skin. Use extreme caution when handling the Perfect Fit Button™.

Always attach the fastener to the button post.

### ATTACHING THE PERFECT FIT BUTTON™:

1. For best results and for safety, it is recommended that you don't wear the pants while attaching the Perfect Fit Button™.
2. Carefully push the pointed post all the way through the cloth at a position to the side of your original button where you would like the Perfect Fit Button™ to appear. (Fig. 1)

**CAUTION:** The button post has a sharp tip that may puncture the skin. Use extreme caution when attaching the Perfect Fit Button.

**NOTE:** Some pants such as thick denim jeans have an extra thick double seam at the end of the waistband. Do not insert the Perfect Fit Button™ directly into this seam; instead, select a position on a thinner section next to the seam.

3. Push the fastener into the post to lock firmly in place. (Fig. 2)
4. Button your pants for a Perfect Fit. (Fig. 3)

**IMPORTANT:** Before washing pants or bringing them to the dry cleaner, remove the Perfect Fit Button™ from the pants.

### REMOVING THE PERFECT FIT BUTTON™:

1. For best results and for safety, it is recommended that you don't wear the pants while removing the Perfect Fit Button™.
2. With one hand, using the tips of your thumb and forefinger, firmly hold the sides of the button as shown. (Fig. 4)
3. With the other hand, using the tips of your thumb and forefinger, simultaneously squeeze and pull the top portion of the fastener to detach it from the pointed post. (Fig. 5)

**CAUTION:** The button post has a sharp tip that may puncture the skin. Use extreme caution when attaching the Perfect Fit Button.

4. Remove the Perfect Fit Button™ from pants and attach the fastener to the post until your next use. Always keep the fastener attached to post when not in use.

**CHOKING HAZARD.** Small parts. Keep Perfect Fit Button™ away from reach of children.

