

# FRONT



## Wireless Stereo Earbuds In-Ear Design

### QUICK CONNECT

**TO CONNECT** - SoundMates are pre-paired to each other; the RIGHT earbud has been given default primary settings.

**FIRST** - Press and hold the multifunction button on both earbuds until you hear a prompt to "Power On". You will then hear the prompt "Pairing". You will hear 2 chimes" indicating that both earbuds are ready to pair.

**SECOND** - Select 'Tzumi SoundMates' from your device's Bluetooth display list.

**THIRD** - You will hear "Device Connected", indicating that your SoundMates are now ready to use!

### HMM... SOUNDMATES NOT PAIRING TO EACH OTHER?

\*If your SoundMates aren't pairing to each other, they will need to be reset. Press and hold the **Multifunction Button** on **BOTH Earbuds** until the LEDs flash RED and BLUE alternately. Choose an earbud to designate as the primary and press its button TWICE. That earbud's LED will flash and the other LED will remain steady. You're good to go!

## EARBUD FUNCTIONS

**NEXT SONG**  
Press 1x

**MICROPHONE**

**500 mAh Portable Charging Case**



**POWER ON**  
Press L+R Buttons Simultaneously

**POWER OFF**  
Press & Hold Either L or R Button

**PLAY** Press 1x

**PAUSE** Press 1x

**ANSWER** Press 1x

**REDIAL** Press 2x

**END CALL** Press 1x

**NOTE:** To change the primary SOUNDMATE, hold the multifunction button on both earbuds. When the lights begin to flash blue and red or you hear 2 chimes, quickly press the multifunction button TWICE on the earbud you want to be the primary.

# BACK



## Bluetooth PAIRING INSTRUCTIONS

Make sure the Bluetooth function is available on your device. Specific pairing procedures will be different depending on different smart devices. For detailed information, please refer to your device's User Guide.

If no Bluetooth connection is made within 5 minutes of the earbuds turning on, the earbuds will automatically be switched off to save power. After a successful pairing, devices will memorize each other. Therefore, no pairing will be needed next time you connect.

1. Keep the distance between the device and your SOUNDMATES within 3 feet (for pairing only).
2. Press and hold the multifunction button on both earbuds until you hear the prompt "Power On".

You will then hear the prompt "Pairing". You will hear 2 chimes to indicate both earbuds are ready for pairing.

3. Activate the Bluetooth function of the pairing device and select "Tzumi SoundMates" from device list displayed.

4. You will hear "Device Connected." Your earbuds are now paired.

## CHARGE SOUNDMATES & CASE

Place SOUNDMATES into the case, they will charge automatically by way of the magnetic base. The LED will turn solid red while charging. Once fully charged, the LED will turn off.

Plug the Micro-USB cable into the bottom of the case to charge it. The LEDs will blink red while charging, and turn solid red when charging is complete.

## IMPORTANT SAFEGUARDS

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source, direct sunlight, humidity, water or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of children.
- This unit is not a toy.

### BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.

## SPECIFICATIONS

Bluetooth Version - Bluetooth 4.2  
Charge Time - Up to 2 hours | Play Time - Up to 2.5 hours  
Case Battery - Lithium Polymer 500 mAh

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Tzumi® Soundmates Item No. 5762 B Distributed by tzumi inc. NY, NY.10016. ©Copyright 2018 tzumi. All Rights Reserved. Made in China. All brands are registered trademarks of their respective companies.

FCC ID: 2A0N7-5761

